



Printer Color Profile Instructions

Color profiles are data files that contain a description of how a particular paper, ink, and printer create all colors, shades, and densities. Using a profile will result in more accurate and consistent output.

Printer: Epson SureColor Px370 (P7370, P9370)

Setting Recommendations

Mode: Off No Color Adjustment

Print Quality: Quality Options / Level 4 (1440x720) – High Speed optional

Support


How to install profiles

www.redriverpaper.com/installprofiles

How to use profiles

www.redriverpaper.com/useprofiles

Some Hints

 The name of the paper you are using will not be listed in the media setting drop down menu in the printer driver. That menu only has the names of manufacturer papers.

Do not use the printer driver's "Preview before printing feature". It can interrupt the color management process.

Turn on your printer's thick paper setting when using heavy weight papers.

- Epson Printers – Set Paper Thickness to recommendation on the next page.
- Platen Gap – Set to Wide if you experience head strikes – black marks or scrapes on your print.

Contact Red River Paper

support@redriverpaper.com

888-248-8774

Handling Guides

Check our website to see if your paper has a Handling Guide. Guides contain important information and helpful tips. www.redriverpaper.com/guides

MEDIA SETTING RECOMMENDATIONS

Paper	Media Setting	Special
UltraPro Gloss	Premium Photo Paper Glossy (250)	
Pecos River Gloss 155 & 230	Premium Photo Paper Glossy (250)	
Pecos River Gloss 360 / 320	Premium Photo Paper Glossy (250)	Paper Thickness 4
UltraPro Luster 300	Premium Luster Photo Paper (260)	
UltraPro Satin	Premium Luster Photo Paper (260)	
Arctic Polar Luster	Premium Luster Photo Paper (260)	
Polar Gloss Metallic	Premium Glossy Photo Paper (250)	
Polar Luster Metallic	Premium Luster Photo Paper (260)	
Premium Matte Papers	Ultra Premium Presentation Paper Matte	
Polar Matte 230 / Double Sided	Ultra Premium Presentation Paper Matte	
Polar Matte 330	Ultra Premium Presentation Paper Matte	Paper Thickness 4
River Linen	Ultra Premium Presentation Paper Matte	
Paper Canvas	Ultra Premium Presentation Paper Matte	
Aurora Natural	Hot Press Natural	Paper Thickness 4
Aurora White	Hot Press Bright	Paper Thickness 4
Palo Duro SoftGloss Rag	Legacy Platine	Paper Thickness 4
Palo Duro Etching	Velvet Fine Art	Paper Thickness 5
Palo Duro Fiber Matte	Ultra Premium Presentation Paper Matte	
Trinity River Velvet	Velvet Fine Art	Paper Thickness 5
Big Bend Baryta	Legacy Baryta II	Paper Thickness 4


Palo Duro Matte Canvas	Exhibition Canvas Matte	Paper Thickness 5
Palo Duro Satin Canvas	Exhibition Canvas Gloss	Paper Thickness 5

Px370 Insider Notes

ADVANCED MEDIA CONTROLS


Epson includes important controls for Paper Thickness, Platen Gap, and Color Density in this menu.

Mac - From the Print menu locate the Advanced Media Control.

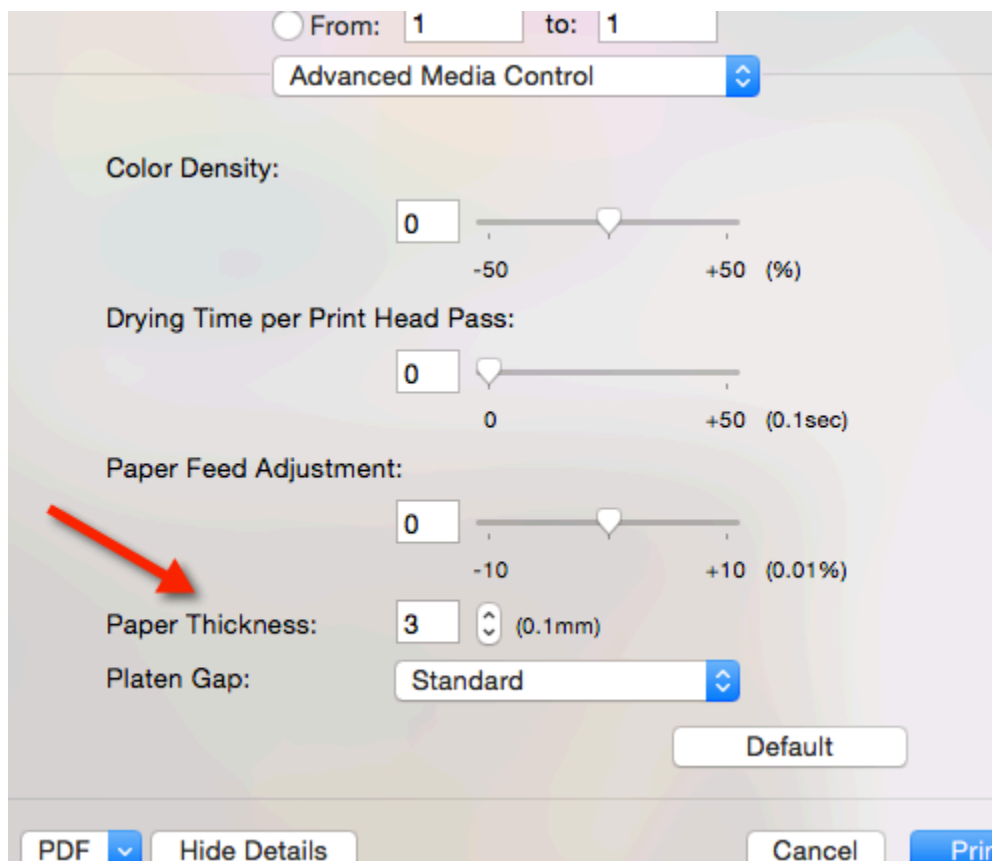

Windows - From the Main tab locate and click on the Paper Config button.

You will find Paper Thickness (3), Platen Gap (2), and Color Density (4) controls in the Paper Configuration dialog.

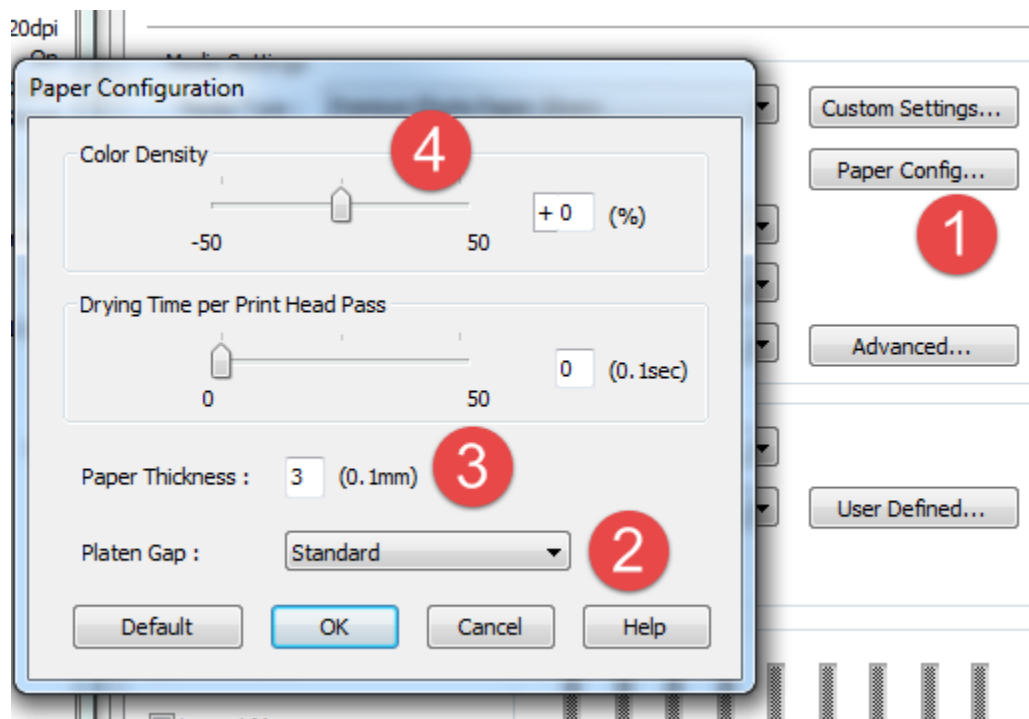

Further Help

Go to www.redriverpaper.com/p800support for more help with driver settings and more.